

The Flex Drive

With the switch to the right the “FAT” effect is off and with the switch to the left the “FAT” effect is on.



This is a 3 way treble switch for voicing your highs. The middle position offers no treble cut and the up and down positions are 2 different treble cut values

This is a 3 way clipping switch. The middle position takes all diodes out ideal for clean boosts(We recommend bringing the gain down in this position) Up or down selects a different diode for different clipping sounds.

Please experiment with all settings since they offer a variety of tones and feel.

We recommend that you start with all control knobs at 12:00. When you apply a clipping diode you will have a slight drop in volume but it brings compression and warmth to your sound. You have two types of diodes with two different sounds to choose from. This makes it very flexible for use with different amp/guitar combinations. If you choose to run the clip switch in the middle you will remove any diodes from the circuit. By doing this you hit the opamp straight away so it can create fuzz type tones in

higher gain positions. We designed this position to work as your boost mode. Keep the gain down around 9:00 or less and the volume becomes your boost volume. You can make it clean or slightly dirty by feathering in the gain to taste. The sweet spot to this pedal is when you have some volume cooking around 1-2:00

All Rockett Pedals operate off of the standard BOSS type 9v adapter or a single 9v battery. The power input is a 5.5 mm x 2.1 mm jack wit the positive voltage on the outer sleeve. Using an external power supply will disconnect the battery. Disconnect the input jack to preserve battery life when not in use or when not used with an appropriate external power supply.

Warranty

Rockett Pedals LLC. will repair or replace, at its discretion, defective workmanship or materials on all new Rockett Pedals products directly or through; the selling dealer or an authorized service technician, for one year from the date of purchase at no cost to the original purchaser. Repair and replacement parts installed will be warranted for the unexpired portion of the original warranty term.

Before sending product in for repair please contact us at chris@rockettpedals.com or jay@rockettpedals.com. Or call 760-419-1345.

This warranty does not cover shipping costs, product appearance or damages caused by accident, abuse, misuse or alteration.

A dated sales slip or order number (issued by a tech, dealer or Rockett Pedals) must accompany a product being returned for warranty service. Repairs without a return authorization number will be refused. Please allow 4 weeks for warranty service. For more information please contact Rockett Pedals. www.rockettpedals.com or 760-419-1345.

No other warranty is expressed or implied.